LOWER OVEN PARTS

For Models:RBD305PDB14, RBD305PDQ14, RBD305PDT14, RBD305PDS14

(Black) (Designer White) (Biscuit) (S.Steel)

30" BUILT−IN ELECTRIC
DOUBLE OVEN
STD−CLEAN LOWER
SELF−CLEAN UPPER

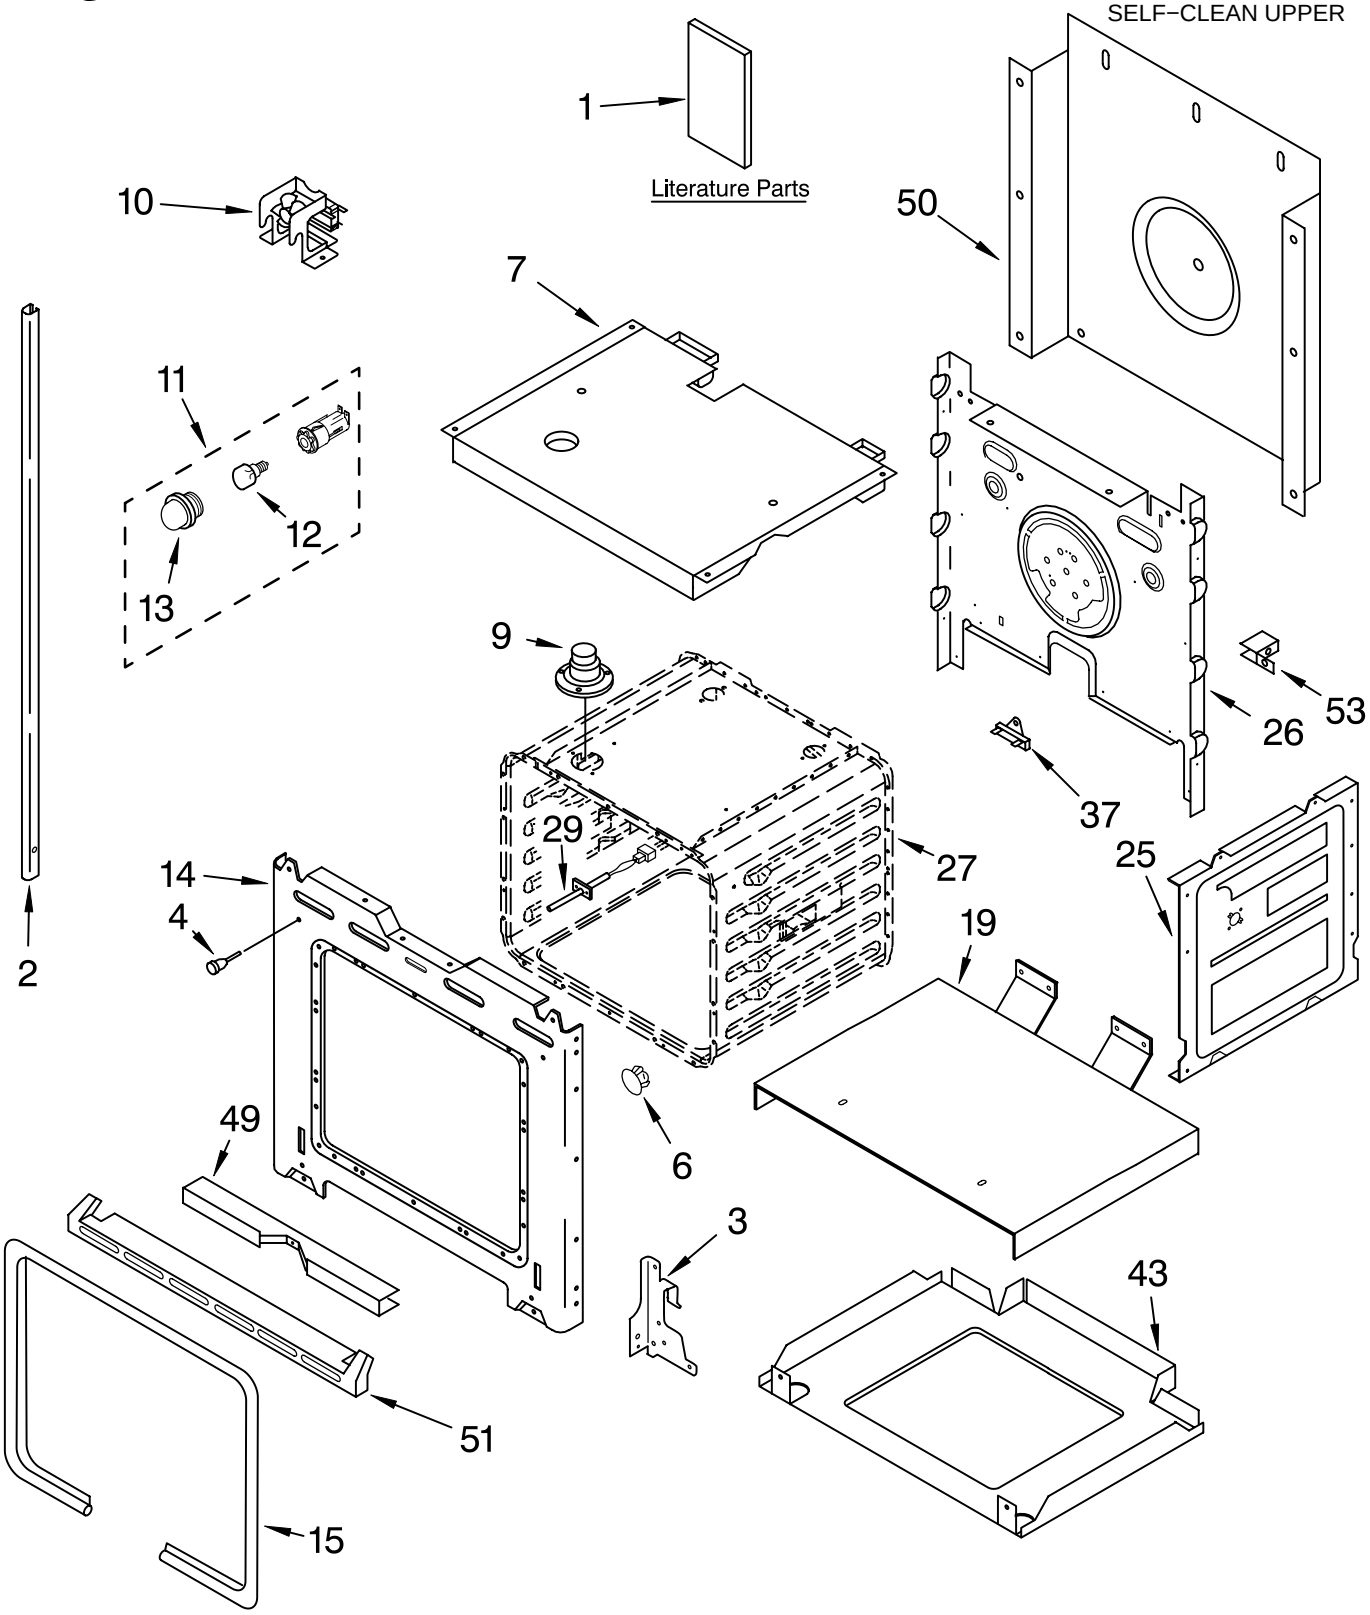

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LOWER OVEN PARTS

For Models:RBD305PDB14, RBD305PDQ14, RBD305PDT14, RBD305PDS14
(Black) (Designer White) (Biscuit) (S.Steel)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
		LOWER OVEN PARTS
1		Literature Parts
	LIT4455993	Installation Instructions
	LIT8300772	Use & Care Guide (Oven)
	LIT8302068	Tech Sheet
	LIT3191638	Safer Cooking Tips
2		Trim, Side
	4450850	RH Black
	4450851	RH White
	4452122	RH Biscuit
	4450853	LH Black
	4450854	LH White
	4452123	LH Biscuit
	8281236	Screw
3		Hinge Receiver
	4455605	Left Hand
	4455606	Right Hand
4	4448520	Bumper, Door
6	4450935	Plug, Door
7	4455865	Top, Chassis
	4449809	Screw
9	4452159	Tube, Vent
	4449154	Screw
10	4451664	Fan & Bracket Assy.
	4454943	Plate, Fan
	4449809	Screw
11	4452368	Oven Light Assy
12	4452166	Bulb, Light
13	4452165	Lens, Light
14	4455612	Frame, Front
	4449040	Screw
	4450118	Nut
15	4450493	Gasket, Door
19	4451478	Support, Insulation
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452234	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)
29	4455636	Sensor
	4449154	Screw
37	4451354	Fuse−Thermal
	4449809	Screw
43	4455530	Base, Chassis
	4449154	Screw
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
51		Trim, Bottom
	4448477	Black Model
	4448478	White Model
	4452415	Biscuit Model
	3400832	Screw
53	4449845	Support, Bracket
	4449809	Screw

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

4449316	Insulation, Wrap
4450365	Insulation, Back

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER OVEN PARTS

For Models:RBD305PDB14, RBD305PDQ14, RBD305PDT14, RBD305PDS14

(Black) (Designer White) (Biscuit) (S.Steel)

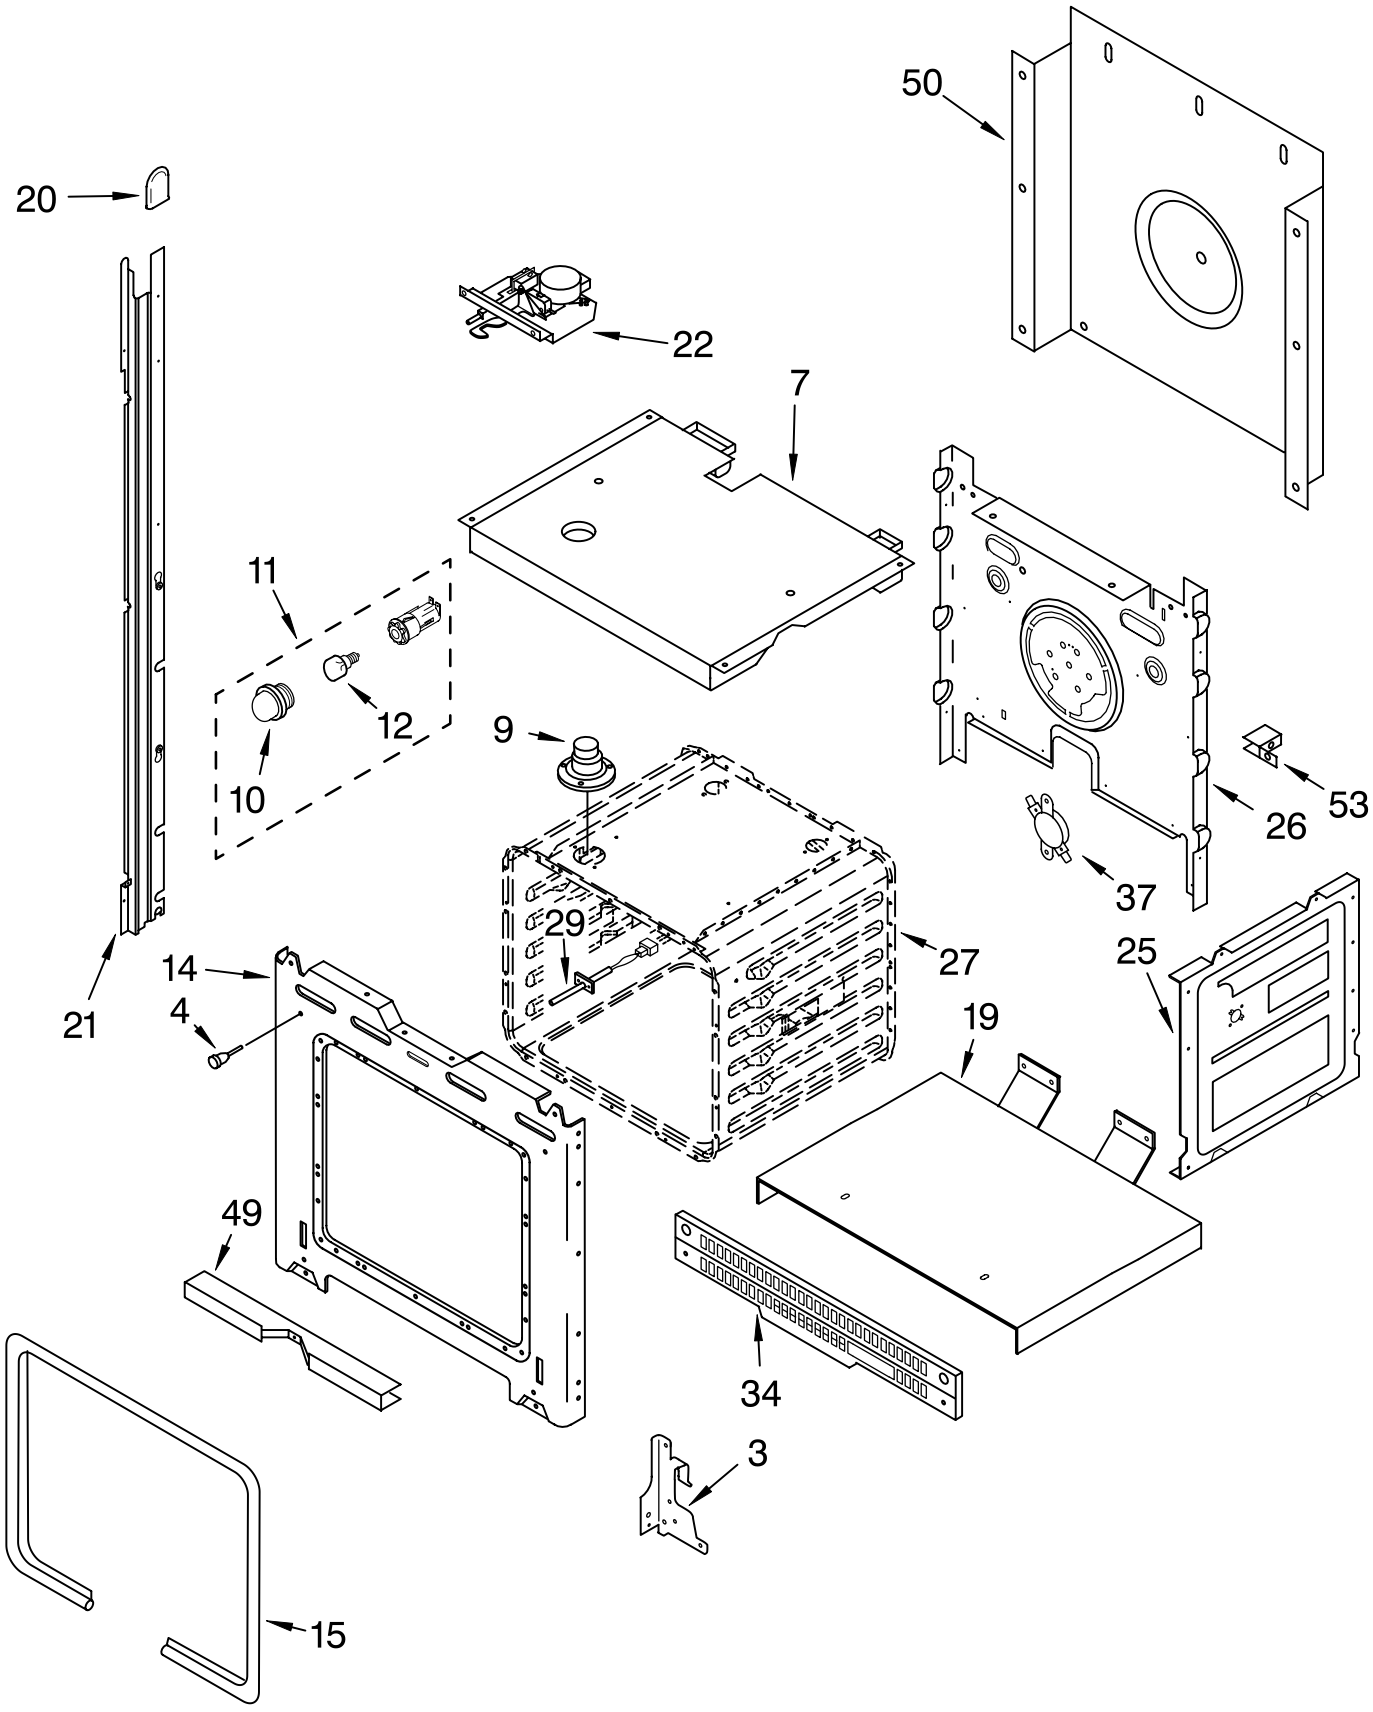

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER OVEN PARTS

For Models:RBD305PDB14, RBD305PDQ14, RBD305PDT14, RBD305PDS14
(Black) (Designer White) (Biscuit) (S.Steel)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
3		Hinge, Receiver
	4455605	Left Hand
	4455606	Right Hand
4	4448520	Bumper, Door
7	4455865	Top, Chassis
	4449809	Screw
9	4452158	Tube, Vent
	3196176	Screw
10	4452165	Lens, Light
11	4452368	Oven Light Assy
12	4452166	Bulb, Light
14	4455612	Frame, Front
	4449040	Screw
	4450118	Nut
15	4455382	Gasket, Door
19	4451478	Support, Insulation
	4449809	Screw
20	4451605	Cap, Spacer
21		Rail, Side
	4450581	Right Side
	4450582	Left Side
	4448444	Grommet
	4449154	Screw
22	8302157	Latch, Motorized
	4449809	Screw
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452234	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)
29	4455636	Sensor
	4449154	Screw
34	4452267	Vent, Center
37	4451442	Thermostat (TOD)
	4449809	Screw
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
53	4449845	Support, Bracket
	4449809	Screw

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

	4449316	Insulation, Wrap
	4450365	Insulation, Back

LOWER OVEN DOOR PARTS

For Models:RBD305PDB14, RBD305PDQ14, RBD305PDT14, RBD305PDS14
(Black) (Designer White) (Biscuit) (S.Steel)

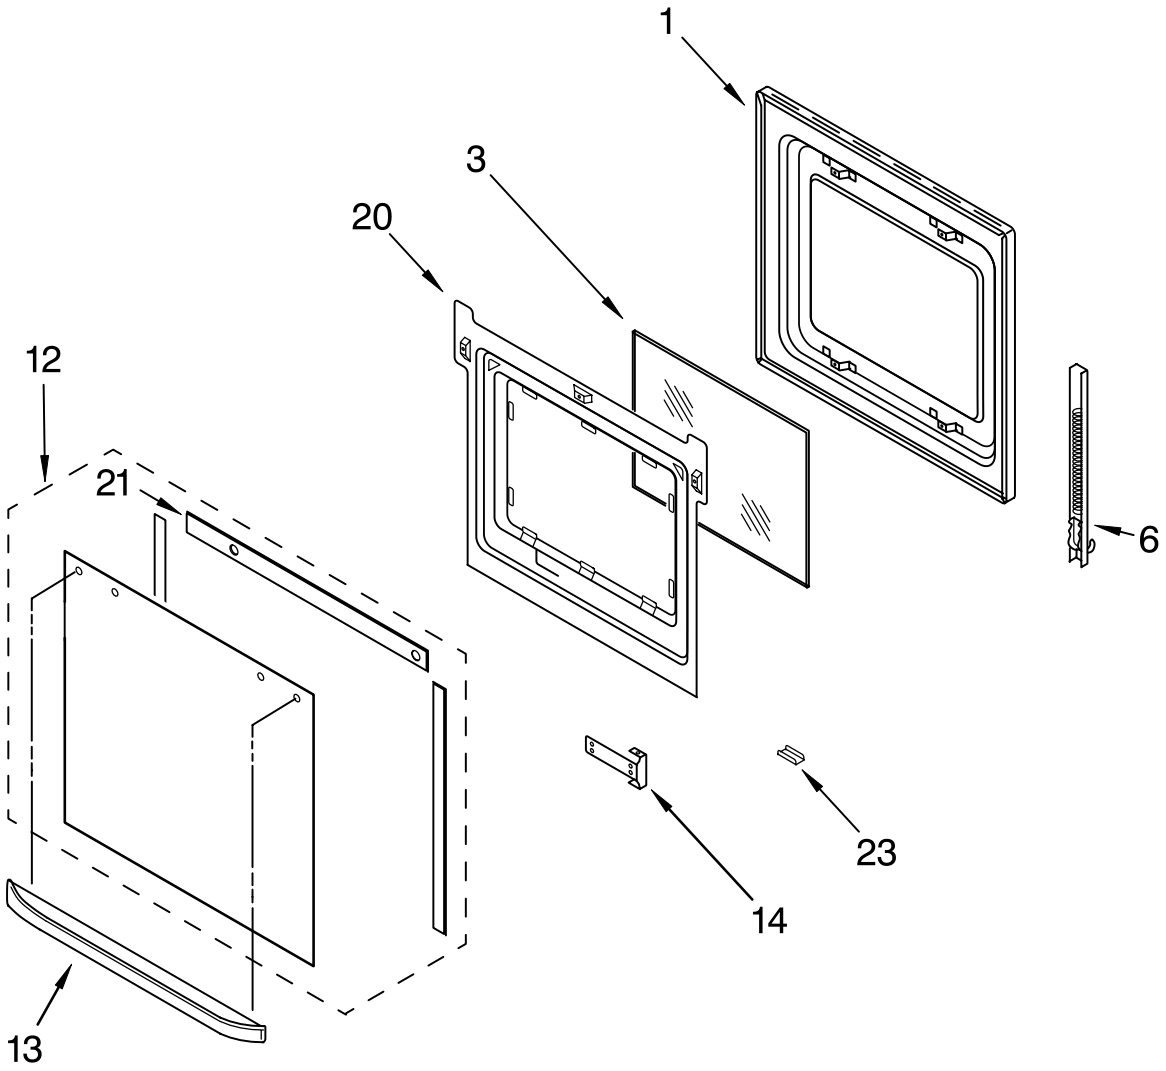

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4455618	Door Liner
3	4449259	Glass, Inner
6		Hinge, Door
	8300565	R.Side (Lt. Brn)
	8300566	L.Side (Lt.Brn)
	8300567	R.Side (Red)
	8300568	L.Side (Red)
	3400832	Screw

Illus. No.	Part No.	DESCRIPTION
12		Door Glass, Outer
	4452065	Black Model
	4452066	White Model
	4452859	Biscuit Model
	8300995	S.Steel Model
13		Door Handle
	4448854	Black Model
	4448855	White Model
	4452860	Biscuit Model

Illus. No.	Part No.	DESCRIPTION
14	4450813	Bracket, Handle(2)
	4451040	Screw
	4449743	Screw (2)
20	8300778	Retainer, Glass
	4449809	Screw
21	8300820	Seal, Door Top
23		Retainer, Clip
	4450863	Black Model
	4450864	White Model
	4452119	Biscuit Model
	4449743	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER OVEN DOOR PARTS

For Models:RBD305PDB14, RBD305PDQ14, RBD305PDT14, RBD305PDS14
(Black) (Designer White) (Biscuit) (S.Steel)

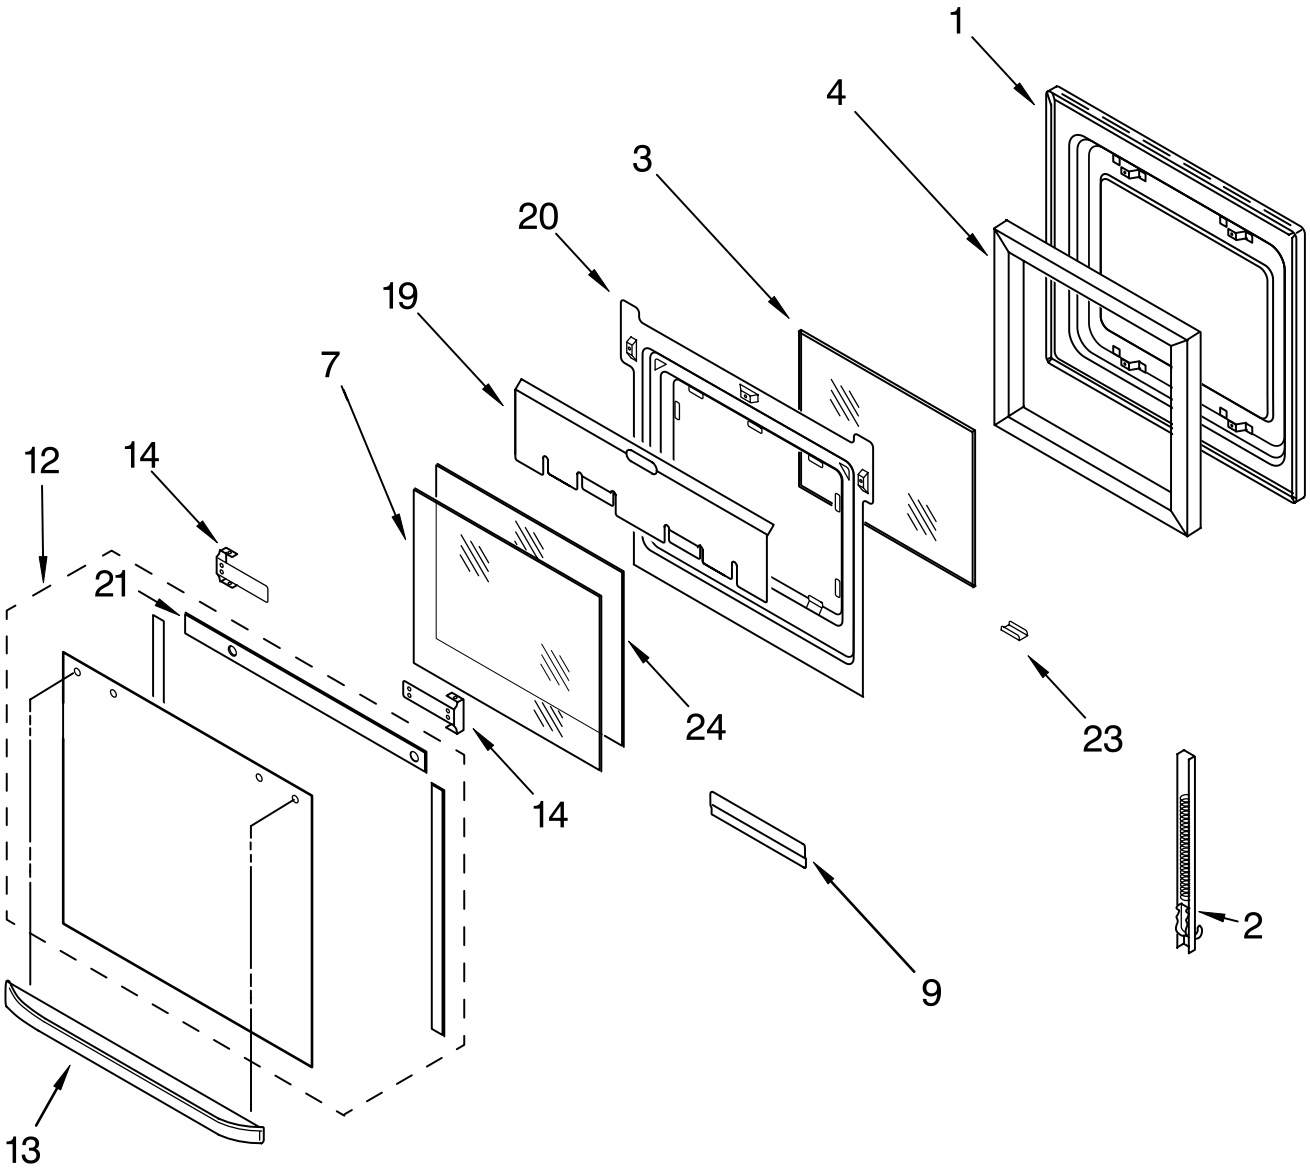

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4455618	Door Liner
2		Hinge, Door
	8300571	R.Side (White)
	8300572	L.Side (White)
	8300573	R.Side (Lt.Blue)
	8300574	L.Side (Lt.Blue)
	3400832	Screw
3	4449259	Glass, Inner
4	4451722	Insulation, Door
7	4449263	Glass, Inner (2)
9	4450470	Retainer, Glass
	4449809	Screw
12		Door Glass, Outer
	4452065	Black Model
	4452066	White Model
	4452859	Biscuit Model
	8300995	S.Steel Model
13		Door Handle
	4448854	Black Model
	4448855	White Model
	4452860	Biscuit Model
14	4450813	Bracket, Handle
	4451040	Screw
	4449743	Screw (2)
19	4450362	Shield, Heat
	4449809	Screw
20	8300778	Retainer, Glass
	4449809	Screw
21	8300820	Seal, Door Top
23		Retainer, Clip
	4450863	Black Model
	4450864	White Model
	4452119	Biscuit Model
	4449743	Screw
24	8300974	Glass, Inner

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models:RBD305PDB14, RBD305PDQ14, RBD305PDT14, RBD305PDS14

(Black) (Designer White) (Biscuit) (S.Steel)

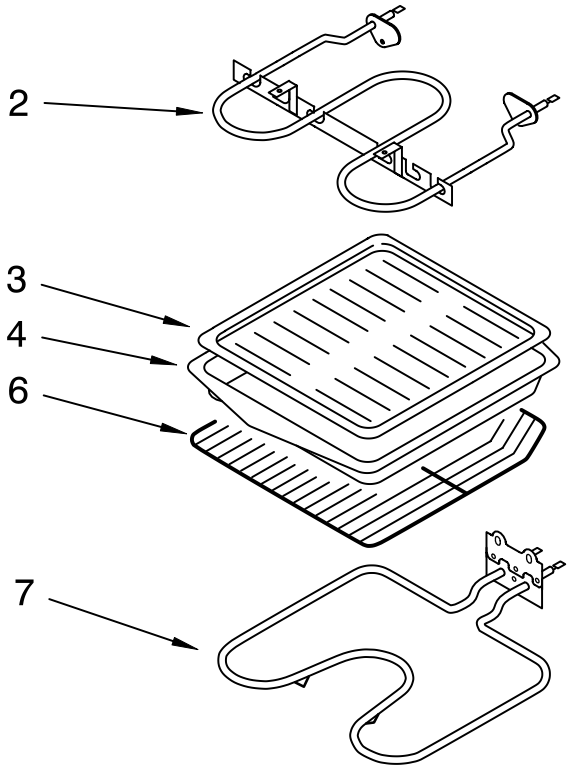

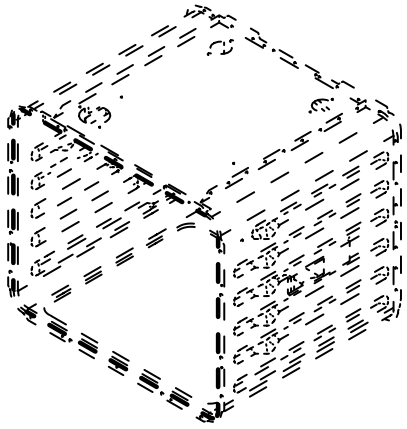

Illus. No.	Part No.	DESCRIPTION
2	4456103	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models:RBD305PDB14, RBD305PDQ14, RBD305PDT14, RBD305PDS14
(Black) (Designer White) (Biscuit) (S.Steel)

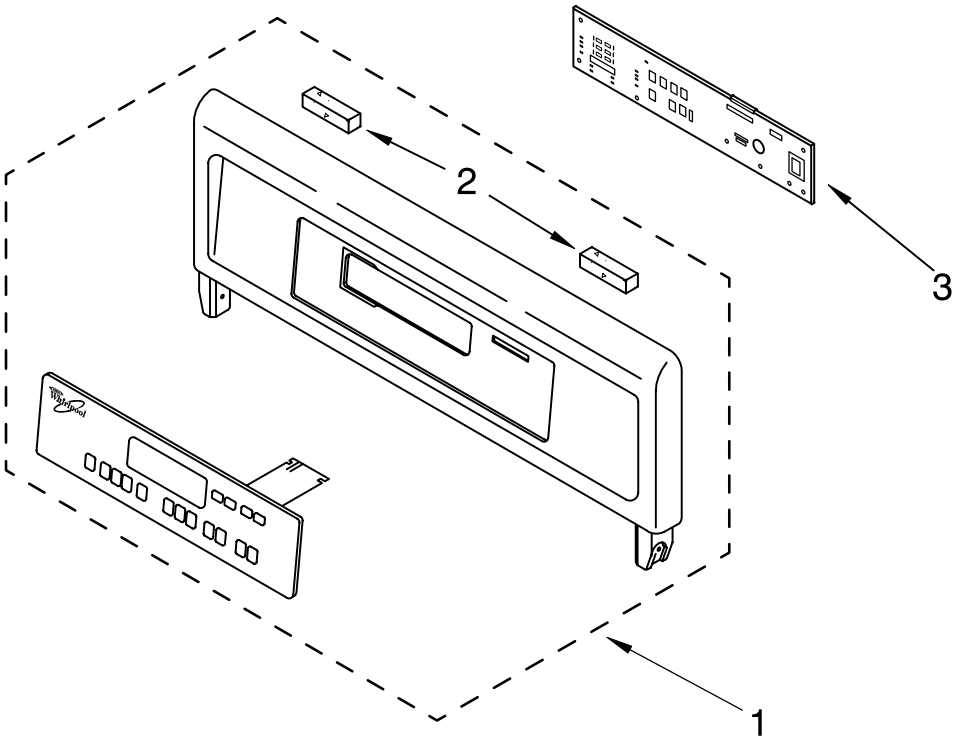

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		Control Panel Assy. W/Membrane Switch
	8300435	Black Model
	8300436	White Model
	8300533	Biscuit Model
	8281179	Screw
2	4451034	Gasket, Control Panel
3	8301917	Assy, Control
	4449745	Screw
	3400832	Screw

TOP VENTING PARTS

For Models:RBD305PDB14, RBD305PDQ14, RBD305PDT14, RBD305PDS14

(Black) (Designer White) (Biscuit) (S.Steel)

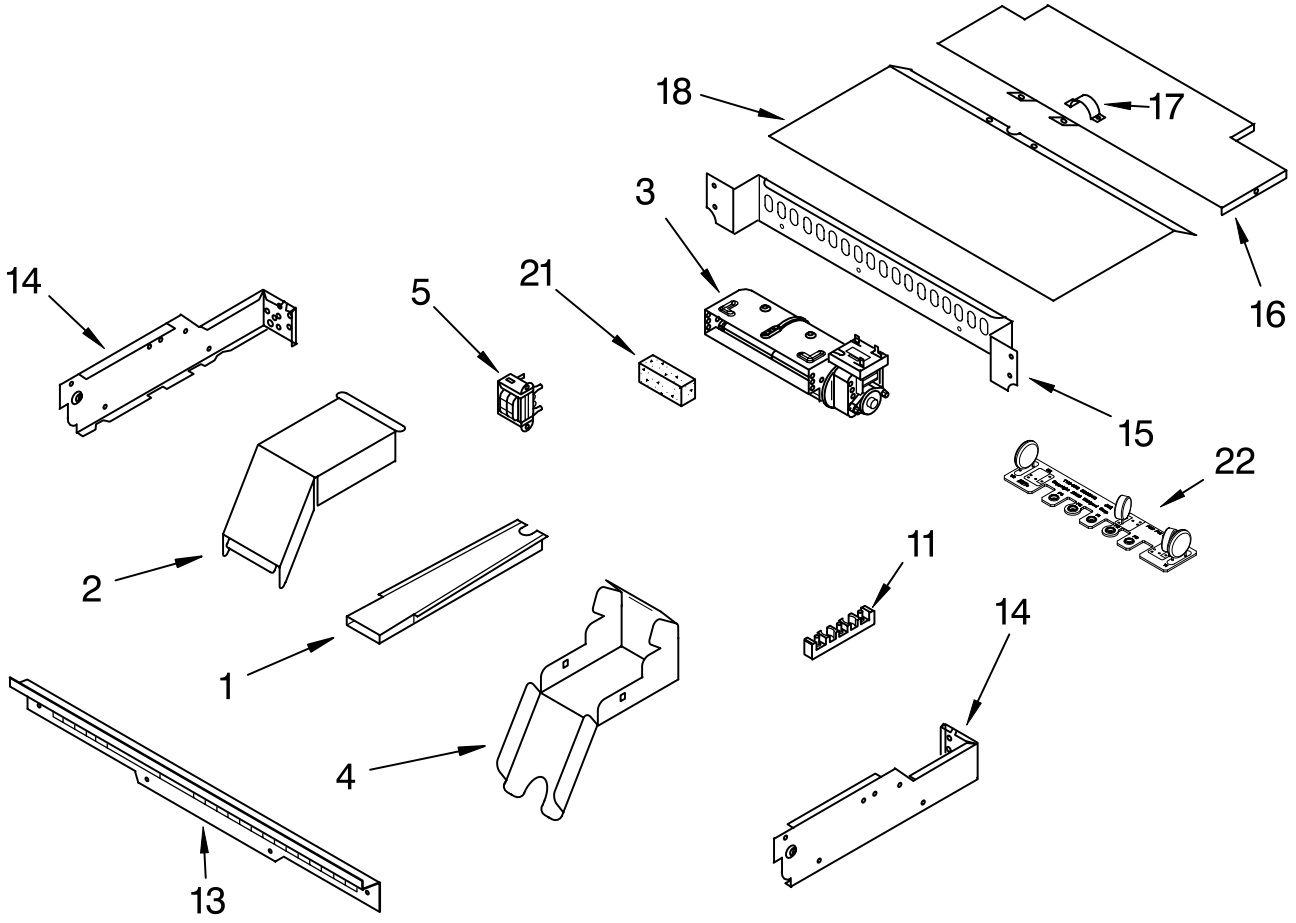

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4451759	Vent, Exhaust
	4449040	Screw
2	4455178	Elbow, Vent−Top
3	4455334	Blower, 60MM
	4455352	Bracket
	4449809	Screw
4	4455177	Elbow, Vent−Bottom
5	8300642	Transformer, Control
11	4449868	Block, Terminal
	3400080	Screw
13	4448549	Vent, Control Panel
	4450038	Screw
14		Side, Control Top
	4451597	Right
	4451598	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
16	4450551	Cover, Top Rear
	4449809	Screw
17	4448664	Clamp, Conduit
	4449809	Screw
18	4452367	Cover, Top Front
	4449809	Screw
21	4451758	Seal, Foam
22	8302143	Suppressor

OPTIONAL PARTS

For Models:RBD305PDB14, RBD305PDQ14, RBD305PDT14, RBD305PDS14
(Black) (Designer White) (Biscuit) (S.Steel)

Illus. No.	Part No.	DESCRIPTION
PAINT, TOUCH−UP (1/2oz.)		
	72017	White
	261869	Cord Brown
	72032	Black
PAINT, SPRAY		
	350930	White
	261900	Citrine White
	830864	Black
ADHESIVE		
	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
SPLICING WIRES−−25FT. LENGTH		
	242828	Wire (12 Ga. 150 c Black)
	242820	Wire (14 Ga. 150 c Black)
	242821	Wire (14 Ga. 150 c Blue)
	242822	Wire (14 Ga. 150 c Brown)
	242830	Wire (14 Ga. 200 c Brown)
	242823	Wire (14 Ga. 150 c Green)
	242824	Wire (14 Ga. 150 c Orange)
	242829	Wire (12 Ga. 150 c Red)
	242825	Wire (14 Ga. 150 c Red)
	242831	Wire (14 Ga. 200 c Red)
	242826	Wire (14 Ga. 150 c White)
	242827	Wire (14 Ga. 150 c Yellow)
	242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
WIRING HARNESS PARTS		
	4454835	Tie, Cable
	4451761	Support, Wiring
	4452222	Spacer−Harness
	4449809	Screw
	4454842	Tie, Cable
	8302154	Harness, Wire (Main DOC)
	4450953	Conduit, Double
	4450800	Screw, Ground
	4448664	Clamp
	4449809	Screw
	112432	Nut
Miscellaneous		
	814381	Pin Hinge Kit
	814387	Roll Tape, Exhaust Duct
	4448950	Screw, Install (4)